

IMPORTANT SAFETY TIPS


operate this electric pump safely follow these safety rules.

Do not operate this pump if it shows any sign of damage to the housing, the cord or the plug.
Do not immerse in water. If the pump falls into water, DO NOT reach for it. Unplug it first, then retrieve.
If the plug or the receptacle does get wet, DO NOT unplug the cord. First disconnect the fuse or circuit breaker.
To prevent water from dripping down the cord into the wall receptacle, make a "Drip Loop" from the part of the cord that extends below the wall receptacle.
For household and Indoor use only.
The supply cord cannot be replaced. If the cord is damaged, the appliance should be scrapped.
Make sure your hand is dry when inserting or removing the plug into/from a receptacle.
Close supervision is necessary when any appliance is used by or around children.
If any water leakage is seen, unplug immediately, stop the leakage and restart after drying the unit completely.
When used to pump air, Do not place this Product below the water level without a Check valve.

INSTRUCTIONS DE SECURITE

avant d'utiliser ce produit, lire attentivement les instructions de sécurité afin de vous prémunir de tout danger.

Ne pas utiliser cette pompe si cette dernière présente des anomalies ou des dommages.
Ne pas immerger dans l'eau. Si cette pompe tombe dans l'eau, ne pas essayer de la récupérer. Débrancher d'abord ou couper l'alimentation générale d'électricité.
Si votre cordon électrique ou la prise est mouillée ou humide, débrancher l'alimentation générale.
Afin de prévenir tout écoulement d'eau sur le cordon électrique, faire un nœud avec votre cordon sous la prise de courant.
Cet appareil doit être utilisé en milieu protégé.
Le cordon électrique ne peut être remplacé. Si ce dernier est endommagé, faites le changer.
Assurez-vous que vos mains sont sèches lorsque vous branchez ou débranchez votre appareil.
Ne pas laisser votre installation à portée des enfants.
En cas de fuite d'eau, débranchez immédiatement, stoppez la fuite et rebranchez après avoir complètement séché votre installation.
Lorsque votre appareil est relié à une pompe à air, ne pas placer ce produit sous le niveau d'eau sans installer une valve de débit.

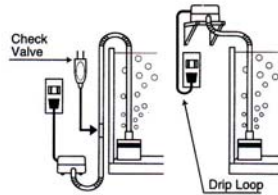

MAINTENANCE

- Use a suction filter(recommended Oscar Item No.1140 Aqua Lifter Suction Filter) in the "water in-let line" to prevent damage or malfunction on this pump.
- Change the water and clean suction filter periodically.
- Do not use dirty water, clean water and air only.
- In case of low water flow or no water flow, clean out fur in the pump and tube by vacuum of air and water alternately.
- Max. water lift distance : 30"
- To provide your satisfaction on this pump, the length of the tube shall be shorter as possible.

INSTRUCTIONS D'INSTALLATION

- Disposez un filtre d'aspiration (pièce recommandée AQUA LIFTER SUCTION FILTER OSCAR n° 1140) dans de l'eau courante afin de prévenir tout dommage ou dysfonctionnement.
- Changez l'eau et nettoyez votre filtre d'aspiration régulièrement.
- Ne pas utiliser de l'eau sale.
- En cas de rejet d'eau ou de non-fonctionnement, nettoyez la mousse filtrante de votre pompe et/ou votre tuyau en alternant filtration de l'eau et de l'air.
- Niveau maximum d'eau : 30"
- Afin de garantir et de vous apporter l'entière satisfaction de cette pompe, la longueur de tuyau utilisé doit être la plus courte possible.

